



BURLEY®

Owner's Instructions and
Safety Manual

Burley Travoy


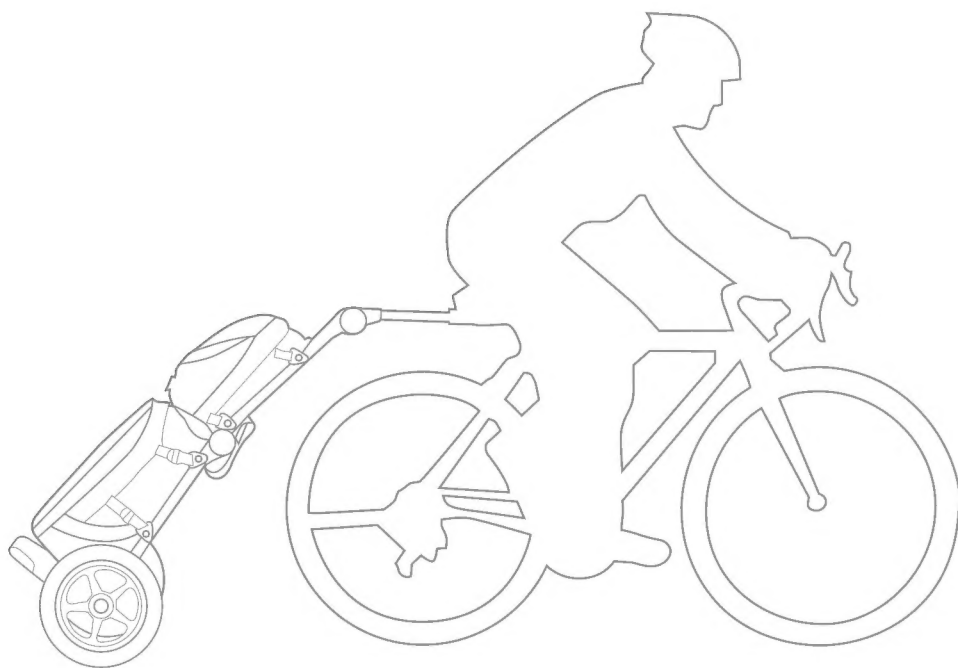


Table of Contents

1. Box Contents / Required Tools
2. Burley Travoy Guide
3. Unfolding Your Trailer Steps 1-4
4. Unfolding Your Trailer Steps 5 & 6
5. Folding Your Trailer
- 6.-7. Connecting Your Trailer to Your Bike
8. Loading Your Trailer
9. Rules / Before You Ride
10. Safety Guidelines
11. Warranty
12. Replacement Parts

Important

Before using your trailer please review this manual. For questions and additional information, contact your authorized Burley dealer or visit **burley.com**.

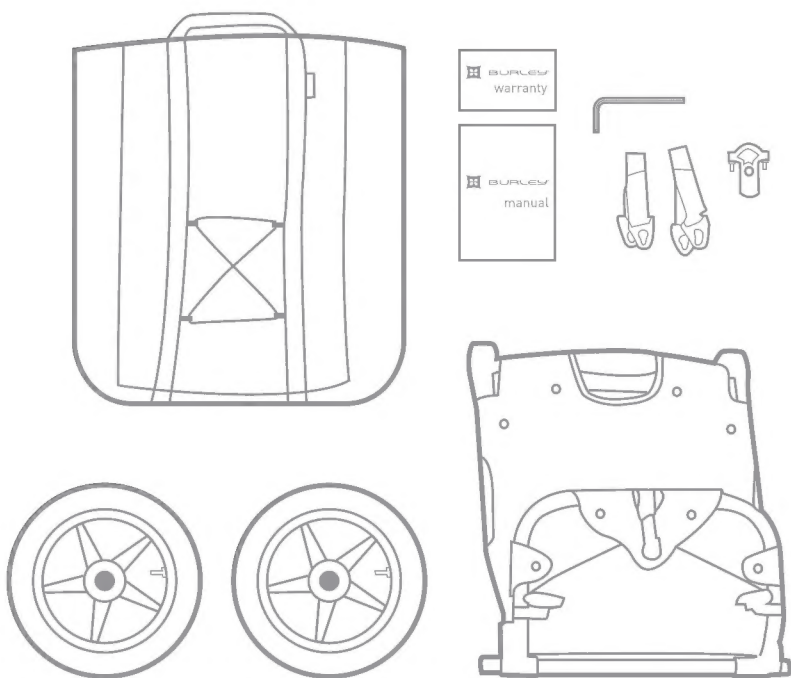


Box Contents:

1 tote bag, 1 manual, 1 warranty card, 1 hex key (4mm),
2 tie-down straps, 1 hitch, 2 wheels, 1 trailer

Required Tools:

4mm Hex key (*included*)



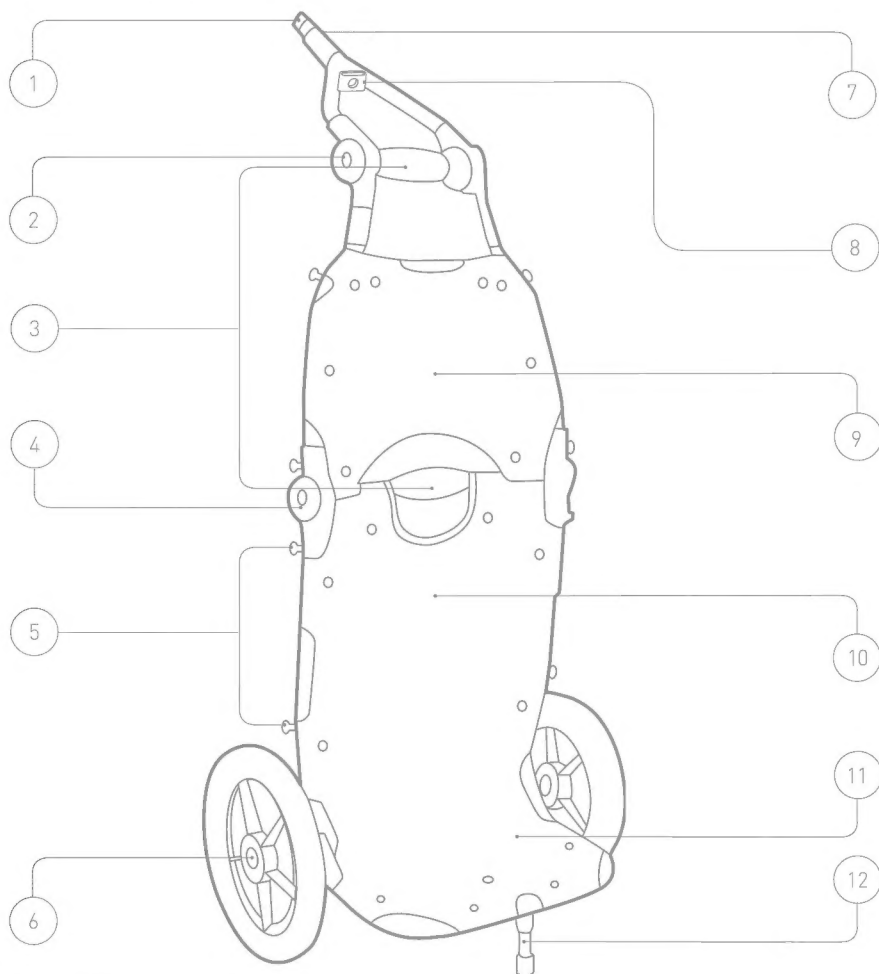


Burley Travoy Guide

- | | |
|-----------------------|-----------------|
| 1. Flex Connector | 7. Tow Bar |
| 2. Upper Frame Hinge | 8. Light Mount |
| 3. Twist Grips | 9. Upper Frame |
| 4. Middle Frame Hinge | 10. Lower Frame |
| 5. Tie-Down Buttons | 11. Shelf |
| 6. Push-Button Wheel | 12. Kickstand |


2.




1

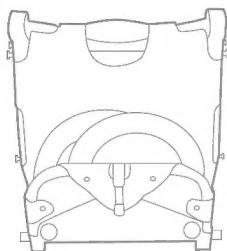


2

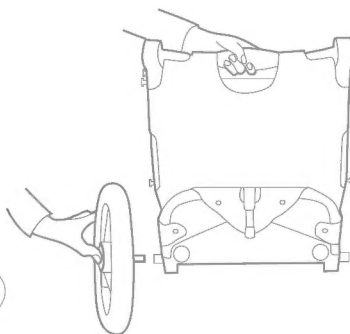

3

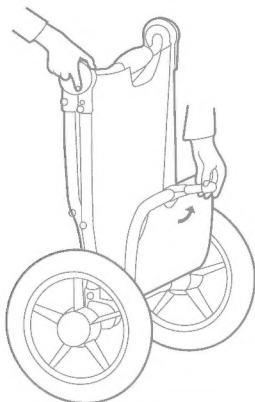

4


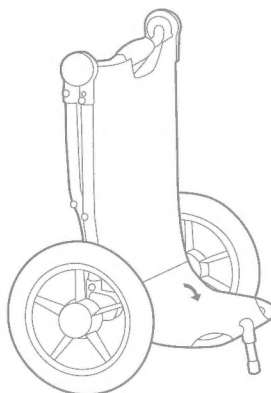


Unfolding Your Trailer Steps 1-4

1. Remove wheels from folded trailer.
2. Press the rubber cap in the center of the wheel and insert axle into axle tube. Pull firmly to ensure axle is engaged.
3. Pull out the kickstand.
4. Unfold the shelf.

3.





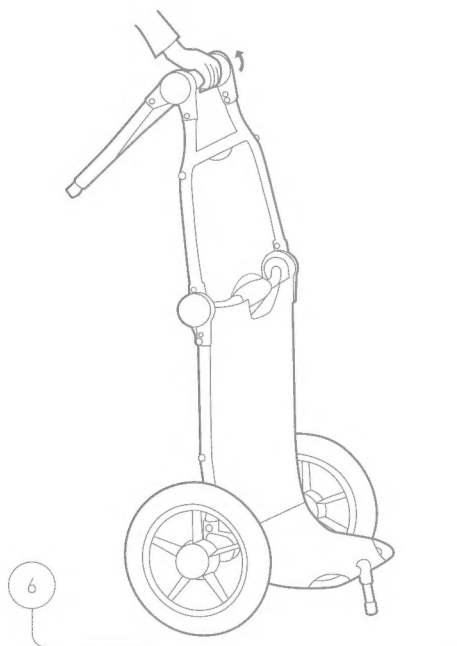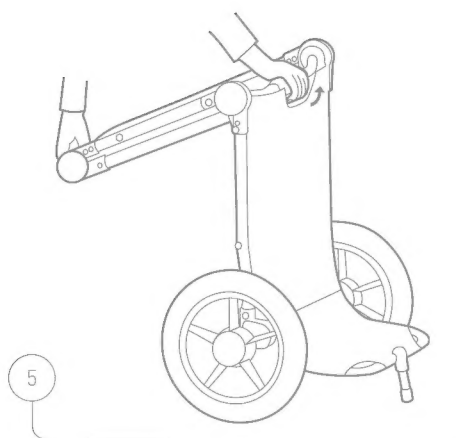

Unfolding Your Trailer Steps 5 & 6

5. Release the middle frame hinge by rotating the twist grip in the direction of the arrow. Then unfold the upper frame.
6. Release the upper frame hinge by rotating the twist grip in the direction of the arrow. Then unfold the tow bar.



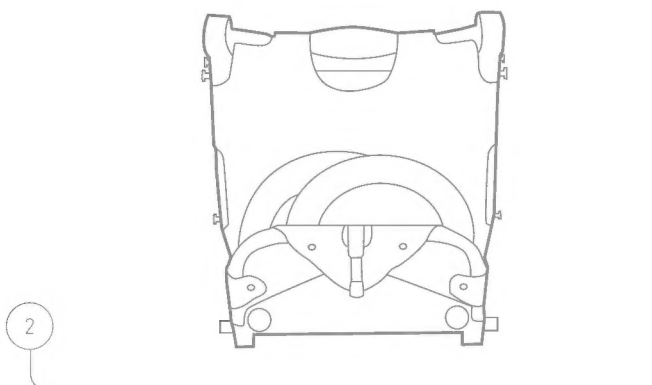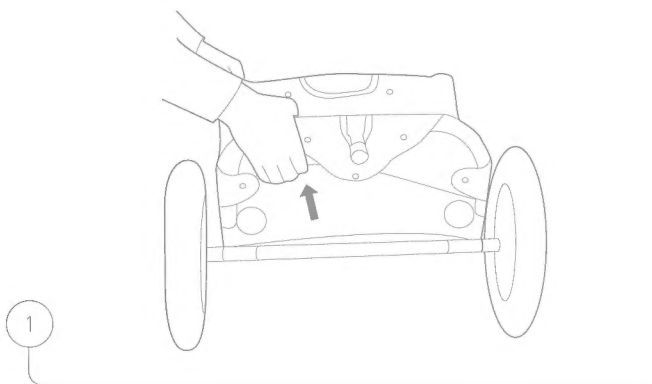


Folding Your Trailer

Follow the steps on pages 3 and 4 in reverse order to fold the trailer.

1. To fold the shelf, first pull the release cable on the bottom and then pull the shelf toward the frame.
2. Store the wheels inside the folded shelf with the axle side of the wheels facing each other.




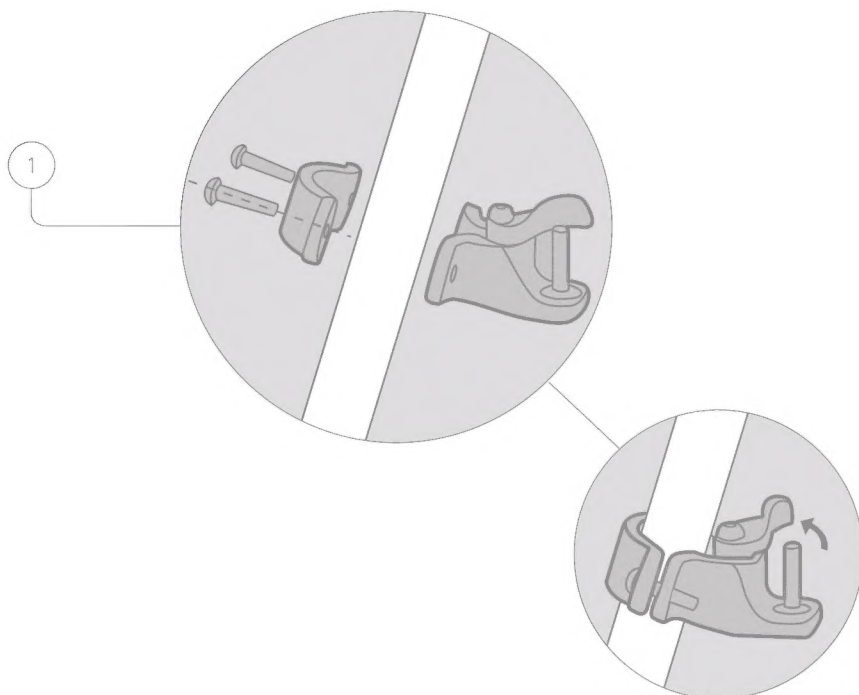

Connecting Your Trailer to Your Bike

1. Attach the hitch to your seat post using the two M6 bolts provided. Adjust the height to ensure trailer does not contact bike wheel or accessories.
2. Attach the trailer to the hitch by rotating the latch to the right and dropping the flex connector onto the hitch pin. The latch will close



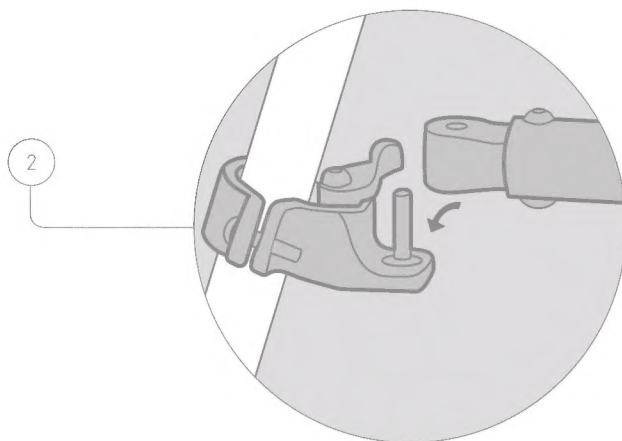

automatically when the flex connector is fully seated. To disconnect the trailer, rotate the latch then lift the flex connector off the hitch pin. Hold your bike upright to make it easier for the coupling to slide on and off the pin.

Notes:


1. Hitch is compatible with 25mm to 32mm seat posts.
2. Use of this hitch with carbon fiber seat posts is not recommended.
3. If your legs rub on the sides of the hitch, lowering it can help.



Figure 1



Figure 2

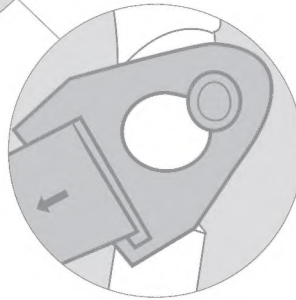

Loading Your Trailer

There are many different ways to load your Travoy. Tie-down buttons are provided in eight places on the outside of the frame. These are intended to be used with swivel-lock buckles included on Travoy bags and accessories. Cargo straps and a basic tote bag are included with your trailer. Various additional bags and accessories are available for different styles and functions.

However you load your trailer, it's important to follow these guidelines:

1. Do not exceed a load of 60 lbs (27 kg).
2. Do not exceed 20 lbs (9 kg) in the upper portion of the trailer (above the middle frame hinge).
3. With the trailer loaded, the weight at the hitch coupling should be greater than 2 lbs (1 kg) but not exceed 8 lbs (3.6 kg).
4. Secure your load such that nothing touches the wheels and no loose items can fall out.



Rules

1. DO NOT carry passengers.
2. DO NOT stand or sit on trailer.
3. Always comply with local vehicle traffic and lighting laws.

It is the user's responsibility to ensure that the load is adequately secured for safe operation. A safe maximum speed is dependent on the trailer load, road conditions, traffic, condition of the towing bicycle, and the experience of the rider. It is the rider's responsibility to ensure that they maintain a safe speed for the trailer load, road conditions and traffic. Riding over rough terrain at high speeds with a loaded trailer can cause damage to the hinges.

Before You Ride

Check before each use:

1. Wheels are properly secured to the trailer
2. Tires are inflated to recommended pressure on tire side-wall
3. Hitch is properly secured to the bicycle
4. Flex connector is properly secured to hitch
5. Hitch latch is closed
6. Load does not exceed 20 lbs in upper bag
or 60 lbs for whole trailer
7. Load is tightly secured to trailer and all straps
or cords are secured.
8. Weight of tow bar at hitch is greater than 2 lbs (1 kg)
but does not exceed 8 lbs (3.6 kg) with trailer loaded
9. Bicycle is in proper working order

Check monthly:

- Inspect tow bar, hitch, frame tubing,
flex connector and hardware for damage
- Check that fasteners are secure
- Inspect tires and wheels for wear and cracks



Safety Guidelines

Refer to the bicycle manufacturer's instructions to determine if the bicycle is suitable for towing a trailer. It is recommended that a qualified bicycle mechanic does a safety check of the towing bicycle before attaching the trailer. Prior to each ride, be sure the trailer does not interfere with braking, pedaling or steering of the bicycle. It is recommended that a rearview mirror be used on the bike.

Always comply with local regulations when using the trailer on public roadways. Never ride a bicycle at night without adequate lighting. Obey all local legal requirements for lighting. The red reflectors that came with the trailer must remain attached and visible at all times. If you need to come to a stop for any reason, be sure to pull off the road completely.

A bicycle pulling a trailer is heavier and less responsive due to the trailer's weight. Avoid rocks, curbs, hard braking, sudden swerving and riding over obstacles with one wheel. Experiment with the loaded trailer in an uncongested area until you become familiar with the way your bike handles while towing a trailer.

Use good judgment when deciding if weather, road and/or traffic conditions are safe to use a Burley.

Failure to comply with the instructions and safety guidelines in this manual could result in serious injury or death.



Warranty

Burley trailers are warranted from date of purchase against defects in materials and workmanship under normal use and service. Burley will repair or replace parts it determines to be defective as follows: 3 years for trailer and skin, 5 years for bags and straps.

The Burley trailer owner must present the trailer for repair at place of purchase, with an original sales receipt or similar proof of purchase. This warranty applies only to the original owner and is non-transferable. Burley cannot be responsible for product failure due to improper assembly, modification of parts or instructions, neglect, abuse, accident, and/or normal wear. The warranty does not cover any trailer used for rental, competitive or commercial use. Burley neither assumes nor authorizes any person to assume any other liability in connection with this Burley product, and there are no oral agreements or warranties collateral to or affecting this agreement. This warranty gives you specific rights. You may also have other rights which vary by state or country.

Replacement parts and accessories can be purchased through your authorized Burley dealer or directly from Burley at **burley.com**.



Replacement Parts

Description	Warranty	Part Number
Hitch	3 years	960088
Tie-down straps (set of 2)	5 years	950167
Tote bag	5 years	960086
Wheel with push-button axle, tire and tube	3 years	950171
Tire (12.5" x 2")	-	950172
Tube (12.5" x 2") with angled valve	-	950173
Flex Connector Kit	3 years	950174
Tie-down buttons (4, with pop-rivets)	3 years	950175
Skin Rivet Replacement Kit (4 sets pop-rivets with washers)	3 years	950176
Cable Repair Kit, upper or middle hinge	3 years	950177
Cable Repair Kit, lower shelf	3 years	950178
Light Mount	3 years	950179



Notes:



BURLEY®

P.541.687.1644 800.423.8445 F.541.687.0436

BURLEY DESIGN Eugene Oregon

burley@burley.com burley.com